



OWNER'S MANUAL

MARINE TOWER

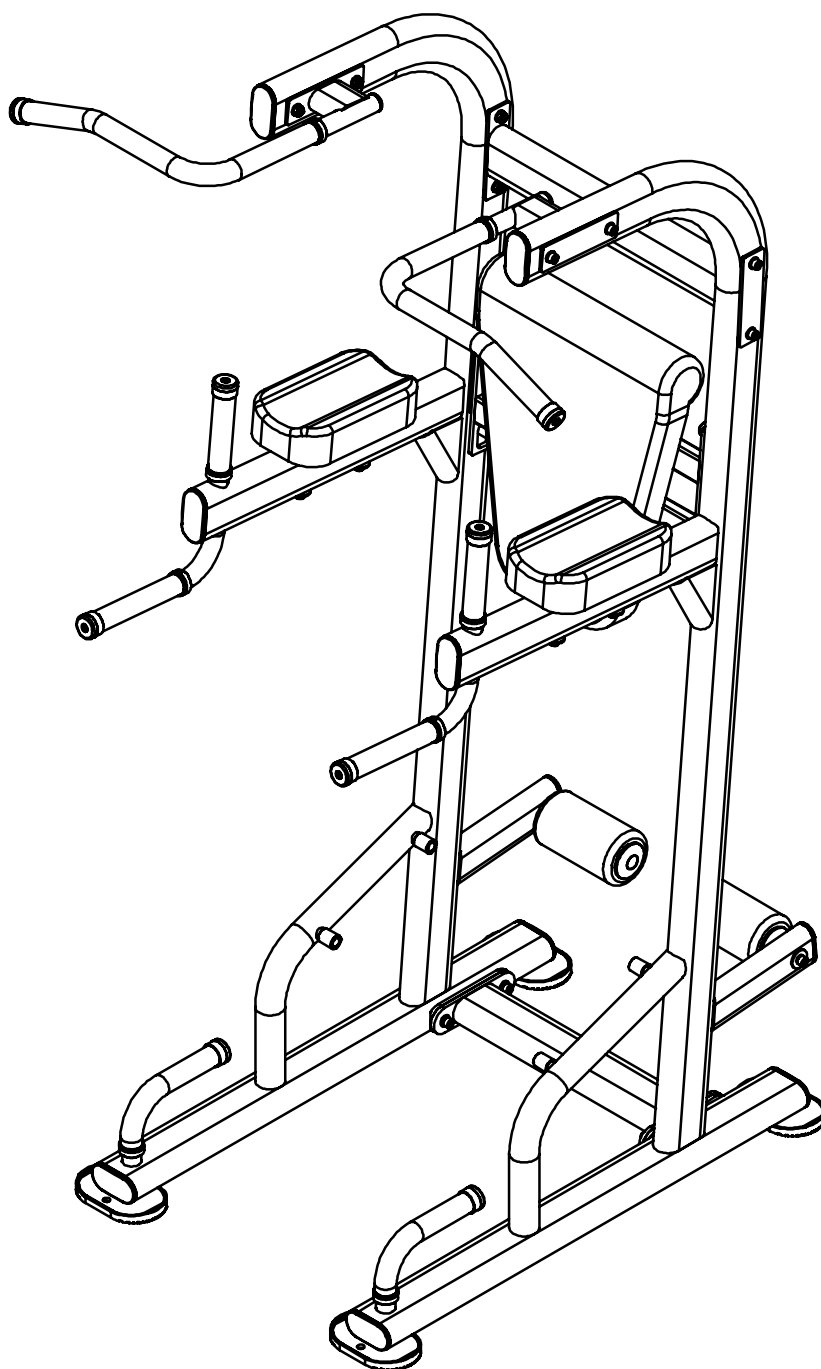

EXPLODED DRAWING

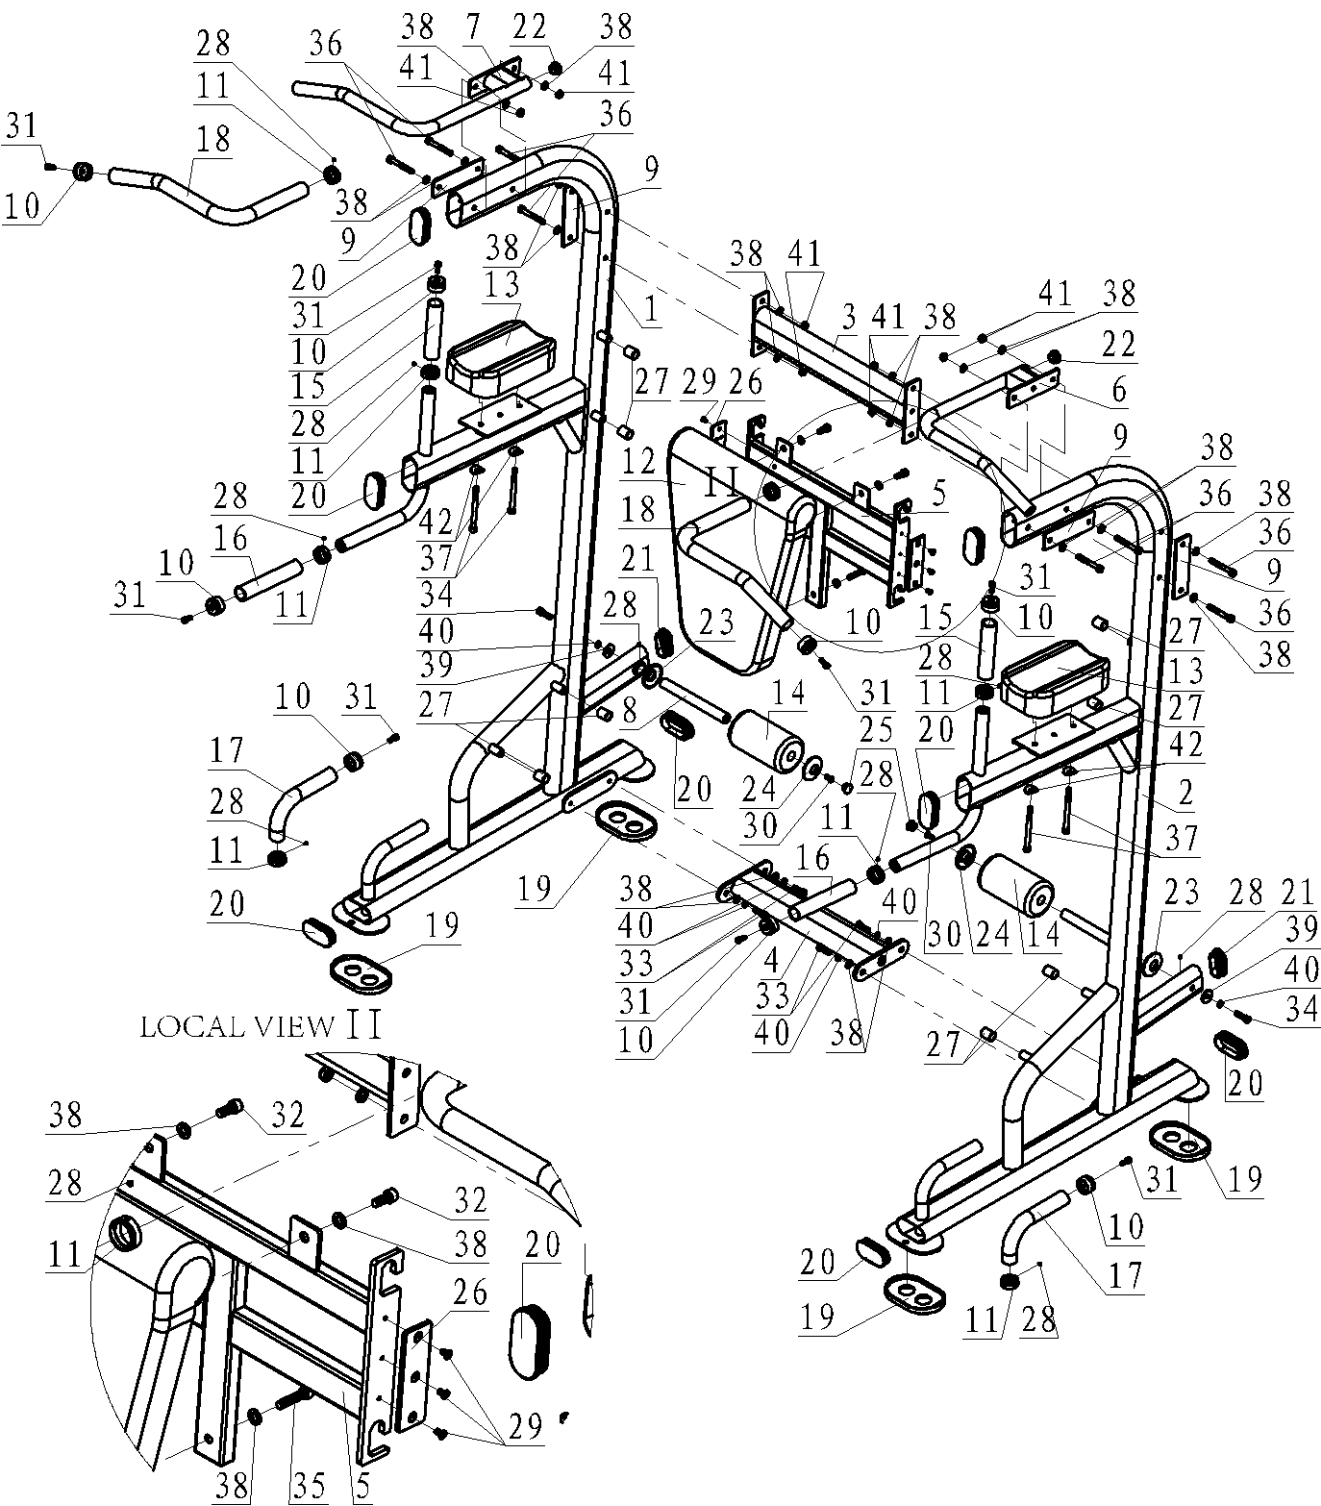

PARTS LIST

NO.	NAME	SPECIFICATION	QUANTITY
1	Left Upright Frame		1
2	Right Upright Frame		1
3	Upper Connection Frame		1
4	Bottom Connection Frame		1
5	Back pack Fixing Frame		1
6	Right Handle Frame		1
7	Left Handle Frame		1
8	Foam Frame		2
9	Two Holes Fixing Plate	178*50*5	4
10	Φ32 End Cap	Φ42*Φ8.5*25	8
11	Φ32 Handle Ring	Φ42*16*M6	8
12	Seat Pad	580*450*100	1
13	Arm Pad	280*165*70	2
14	Foam	Φ100*180	2
15	Handle Grip 160	Φ31*3*160(TPV)	2
16	Handle Grip 205	Φ31*3*205(TPV)	2
17	Prone Handle Grip	Φ31*3*265(TPV)	2
18	Pull Up Handle Grip	Φ31*3*657(TPV)	2
19	Foot Pad	169*109*16	4
20	PT50*100 End Cap	PT50*100*2.5	8
21	PT40*80 End Cap	PT40*80*2.5	2
22	Φ32 End Cap	Φ32*3	2
23	FOAM Plate	Φ65*Φ26*9	2
24	FOAM End Cap	Φ65*Φ26*18	2
25	FOAM End Cap Plug	Φ25*2	2
26	Long Guard Plate	150*48*5	2
27	Plastic Cover	Φ25*Φ19.9*30	8
28	Hex Screw	M6*6	10
29	Hex Countersunk Head Screw	M6*12	6
30	Hex Pan-Head Bolt	M8*20	2
31	Hex Bolt	M8*20	8
32	Hex Bolt	M10*25	2
33	Hex Bolt	M10*30	4
34	Hex Bolt	M10*35	2
35	Hex Bolt	M10*45	1
36	Hex Bolt	M10*75	8
37	Hex Bolt	M10*120	4
38	Flat Washer	Φ11*Φ20*2	23
39	Flat Washer	Φ11*Φ34*3	2
40	Spring Washer	Φ10	6
41	Nut	M10	8

ASSEMBLY STEPS

Step 1.

1. Attach Bottom Connection Frame (4) to Left Upright Frame (1) and Right Upright Frame (2) using:
M10*30 Hex Bolt (33)

$\Phi 10$ Spring Washer (40)

$\Phi 11 * \Phi 20 * 2$ Flat Washer (38)


Please don't tighten all the bolts.

2. Attach Upper Connection Frame (3) to Left Upright Frame (1) and Right Upright Frame (2) using
M10*75 Hex Bolt (36)

$\Phi 11 * \Phi 20 * 2$ Flat Washer (38)

M10 Nut (41)

Two Holes Fixing Plate (9)

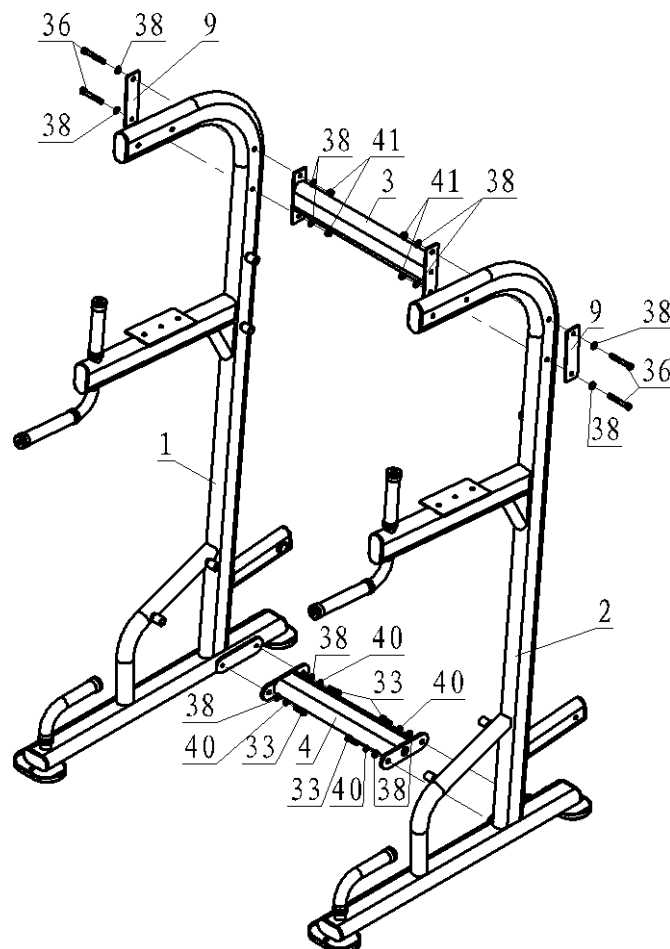

Step 2.

1. Remove M6*6 Hex Screw (28) and attach Foam Frame (8) to Left Upright Frame (1) using:
M10*35 Hex Bolt (34)

Φ 10 Spring Washer (40)

Φ 11*Φ34*3 Flat Washer (39)

Same way to attach Foam Frame (8) to Right Upright Frame (2).

2. Attach Right Handle Frame (6) to Right Upright Frame (2) using:

M10*75 Hex Bolt (36)

Φ 11*Φ20*2 Flat Washer (38)

M10 Nut (41)

Two Holes Fixing Plate (9)

3. Attach Left Handle Frame (7) to Left Upright Frame (1) using:

M10*75 Hex Bolt (36)


Φ 11*Φ20*2 Flat Washer (38)

M10 Nut (41)

Two Holes Fixing Plate (9)

4. Attach Back pack Fixing Frame (5) to Left Upright Frame (1) and Right Upright Frame (2).

Tighten all the bolts.

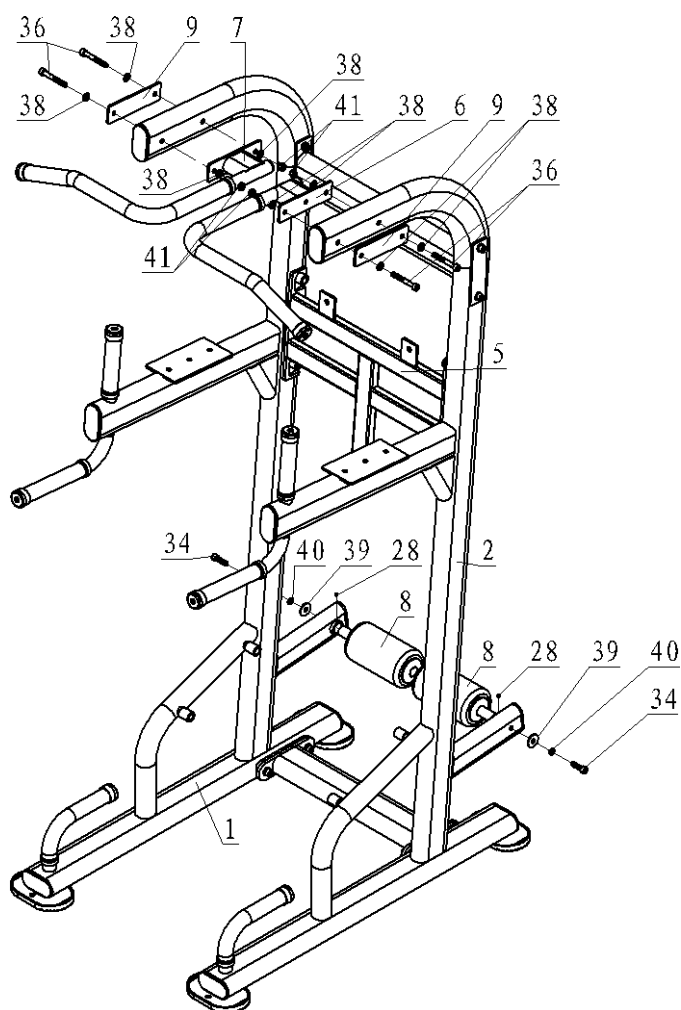

Step 3.

1. Attach Seat Pad (12) to Back pack Fixing Frame (5) using:

M10*25 Hex Bolt (32)

M10*45 Hex Bolt (35)

Φ 11*Φ20*2 Flat Washer (38)

2. Attach Arm Pad (13) to Left Upright Frame (1) using:

M10*120 Hex Bolt (37)


Φ 34*Φ11*2*R21 Curved Washer (42)

3. Attach Arm Pad (13) to Right Upright Frame (2) using:

M10*120 Hex Bolt (37)

Φ 34*Φ11*2*R21 Curved Washer (42)

Tighten all the bolts.

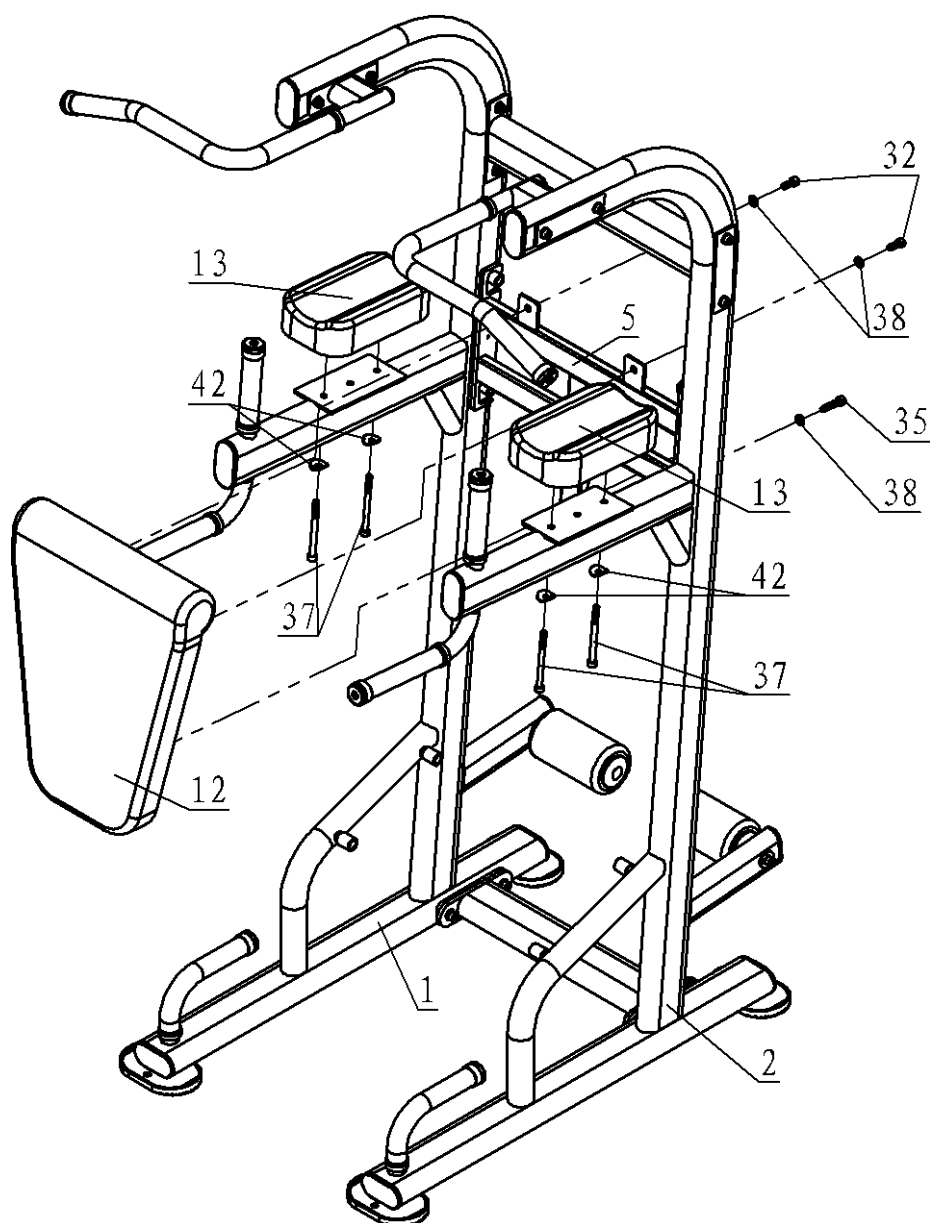

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- * Read all instructions before using the equipment. These instructions are written to ensure your safety and to protect the unit.
- * Do not allow children on or near the equipment.
- * Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- * Wear proper exercise clothing and shoes for your workout----no loose clothing.
- * Be careful when getting on or off the equipment.
- * Do not overexert yourself or work to exhaustion.
- * If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- * Never operate the unit when it has been dropped or damaged.
- * Never drop or insert anything into any opening in the equipment.
- * Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
- * Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear.
- * Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- * Do not attempt to lift more weight than you can control safely.
- * Do not use the equipment outdoors.

PERSONAL SAFETY DURING ASSEMBLY


- * Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.
- * Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Instructions


Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.


Tools Required

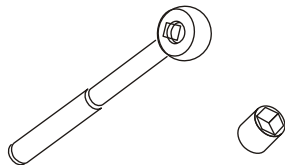


Ratchet Wrench and Socket

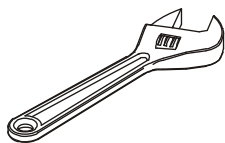

Adjustable Wrench

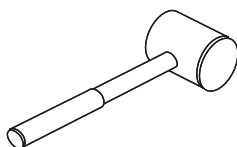

Rubber Mallet



Hex Key Wrench Set

Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY						
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY							
Clean; Upholstery	DAILY	WEEKLY							
Inspect; Cables or Belts and their tension	DAILY	WEEKLY							
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS							
Inspect; All Decals	WEEKLY	3 MONTHS							
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS							
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS							
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based Lubricant (Superlube)	MONTHLY	3 MONTHS							
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS							
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY							
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY							
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS							

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- * Check all pieces for signs of visible wear or damage.
- * Check springs in snap hooks and pull-pins for proper tension and alignment.
- * If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- * To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- * Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- * Replace ripped or worn upholstery immediately.
- * Keep sharp or pointed objects clear of all upholstery.

Decals:

- * Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- * Inspect all nuts and bolts for any loosening and tighten if needed.
- * Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

- * These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- * We use only high quality belt, and mil-spec cables.
- * Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- * While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- * Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- * Referring to the Owners Manual, when belts or cables are used check all bolt attachments to be sure they are properly attached.
- * Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- * Wipe down adjusting tubes with a dust free rag before applying lubricant.
- * Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

- * Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. Repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS